



INSTALLATION INSTRUCTIONS



AK-BLASTER MOD SHOP IS AN ONLINE SHOP AND WE MAKE PRODUCTS TO MODIFY AND CUSTOMIZE NERF BLASTER. WE OFFER WORKER MOD, F10555, MEN-GUN MOD, AK TACTICAL GEAR.XSW.ML3D, ARTIFACT, ETC BRAND PRODUCTS ON BLASTER MODDING. WE PROVIDE SERVICES ON CUSTOMIZE BLASTER WITH PARTS, 3D PRINTING AND PAINT WORKS.

WE ORGANIZE BLASTER GAME ACTIVITIES AND NERF PARTY FOR KIDS. WE OFFER VENUE DESIGN, CUSTOMIZE INVITATION CARDS,
HEALTHY FOODS AND CAKE, ORGANIZE NERF BATTLE GAME AND PHOTOGRAPHY SERVICES.

Disclaimer

Disclaimer:

Individual results may vary. Modding blasters is a hobby of ours, and in no way do we claim to be experts on the subject. We've written this manual for other enthusiasts who want to accomplish what we have with our blasters. However, due to legal reasons, we're unable to guarantee any results and the content in this manual should not be considered professional advice.

The use of this information and recommended products should be based on your own due diligence. You agree not to hold the authors and/or distributors of this manual liable for any success or failure of your endeavors that are directly or indirectly related to the purchase and use of our information, recommended products and services.




Make sure you have good knowledge on electric circuit and modding skill. Please read below instruction carefully and reference to online video on installing instruction.

INSTALLATION STEPS

Supplies Needed:


- Small Phillips Head Screwdriver
- Small Flat Head Screwdriver

Step 1:Prepare tools for modifying the blaster, screw driver, clip and glue.

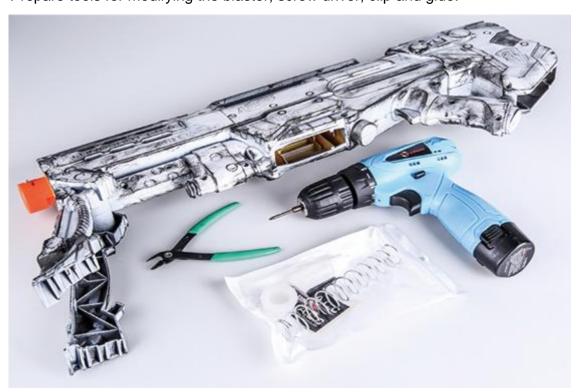

Step 2:

Remove all the screw on the body, aware keep all the screw in proper location.

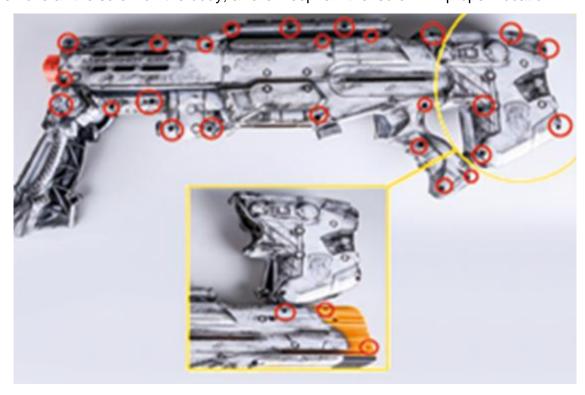

Step 3:Remove the screw attaching the piston module, put the module and slide plate out of the body.



Step 4:Remove the screw on the base cover and open it.



Step 5:

Using clip to remove the plastic ridges as shown, trim and polish to ensure fine cutting edge.



Step 6:

Replace the cap with Worker MOD buffer cap, using a screw driver if necessary to ensure the buffer cap completely install in the connector.



Step 7:

Remove the screw at the end of piston, replace the spring coil and O-ring with Worker MOD spring coil and O-ring.



Step 8:

Locate the air hole on the piston tube, glue the hole as shown to ensure the air hole being blocked. Wait 10 minutes to complete dry out.




Step 9:

Lubricate the O-ring and piston tube internal wall before closing the base cover. Be



Step10:

Replace the small spring coil on the slide part with Worker MOD spring coil.

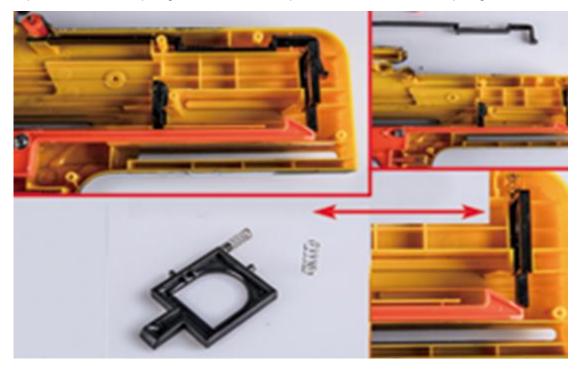

Step 11:Reverse action to assemble the blaster. Time to Battle!



installation is complete.