

# GUARDIAN



PASSION FOR THE DARTS



WORKER

F10555



AK  
HOMME

X.S.W ML3D

AK-BLASTER MOD SHOP IS AN ONLINE SHOP AND WE MAKE PRODUCTS TO MODIFY AND CUSTOMIZE NERF BLASTER. WE OFFER WORKER MOD, F10555, MEN-GUN MOD, AK TACTICAL GEAR.XSW.ML3D, ARTIFACT, ETC BRAND PRODUCTS ON BLASTER MODDING. WE PROVIDE SERVICES ON CUSTOMIZE BLASTER WITH PARTS, 3D PRINTING AND PAINT WORKS. WE ORGANIZE BLASTER GAME ACTIVITIES AND NERF PARTY FOR KIDS. WE OFFER VENUE DESIGN, CUSTOMIZE INVITATION CARDS, HEALTHY FOODS AND CAKE, ORGANIZE NERF BATTLE GAME AND PHOTOGRAPHY SERVICES.

# ***Disclaimer***

---

## **Disclaimer:**

Individual results may vary. Modding blasters is a hobby of ours, and in no way do we claim to be experts on the subject. We've written this manual for other enthusiasts who want to accomplish what we have with our blasters. However, due to legal reasons, we're unable to guarantee any results and the content in this manual should not be considered professional advice.

The use of this information and recommended products should be based on your own due diligence. You agree not to hold the authors and/or distributors of this manual liable for any success or failure of your endeavors that are directly or indirectly related to the purchase and use of our information, recommended products and services.



Make sure you have good knowledge on electric circuit and modding skill. Please read below instruction carefully and reference to online video on installing instruction.

## INSTALLATION STEPS

### Supplies Needed:

- Small Phillips Head Screwdriver
- Small Flat Head Screwdriver

### Step 1:

Now you need to remove the screws on the Retaliator's body as it shown in the diagram.  
Remark: Please make sure you keep the screw properly.





## Step 2:

After you removed the screws on the Retaliator, you need to open it and remove the spring coil. Remark: Please remember all the parts' location such as taking a photo of it before any modification.




## Step 3:

After you take out the striker and slider frame, in the mean time you may remove the Original screws on the frame.



## Step 4:

Now you need to insert the Brass in striker frame as it shown in the diagram. Remark: The brass should be place in a direct hexagon way.

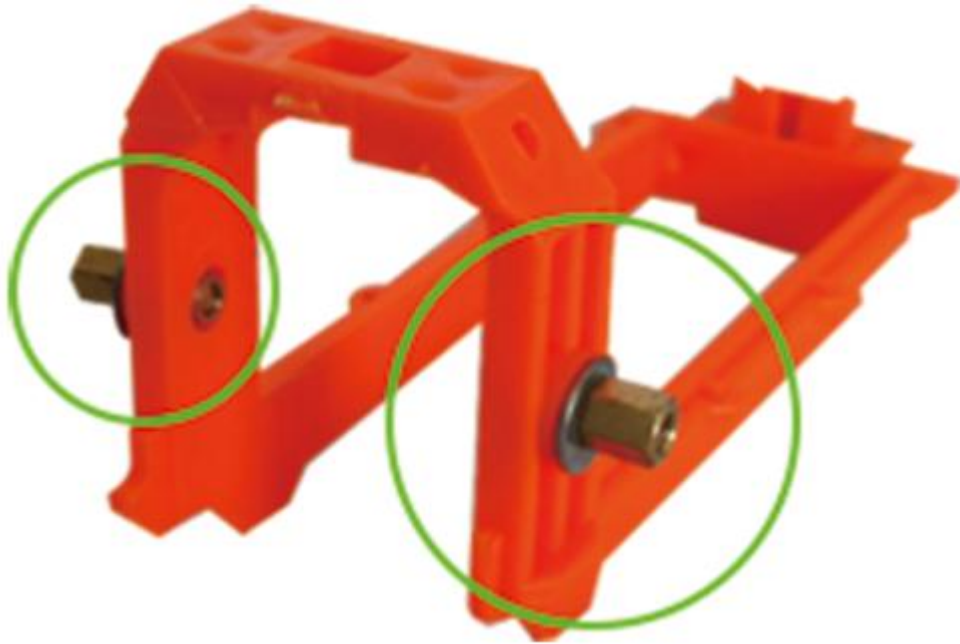

## Step 5:

Now you need to Install the screws on the Retaliator's body as it shown in the diagram.




## Step 6:

Install the front barrel core body onto the Retaliator muzzle adaptor, turn to upright position and fasten the screw on the barrel top to secure in place.




## Step 7:

Wear the PWD body shell on the Retaliator body, beware to brass nuts on the bolt sled that need to expose outside PWD body kit.

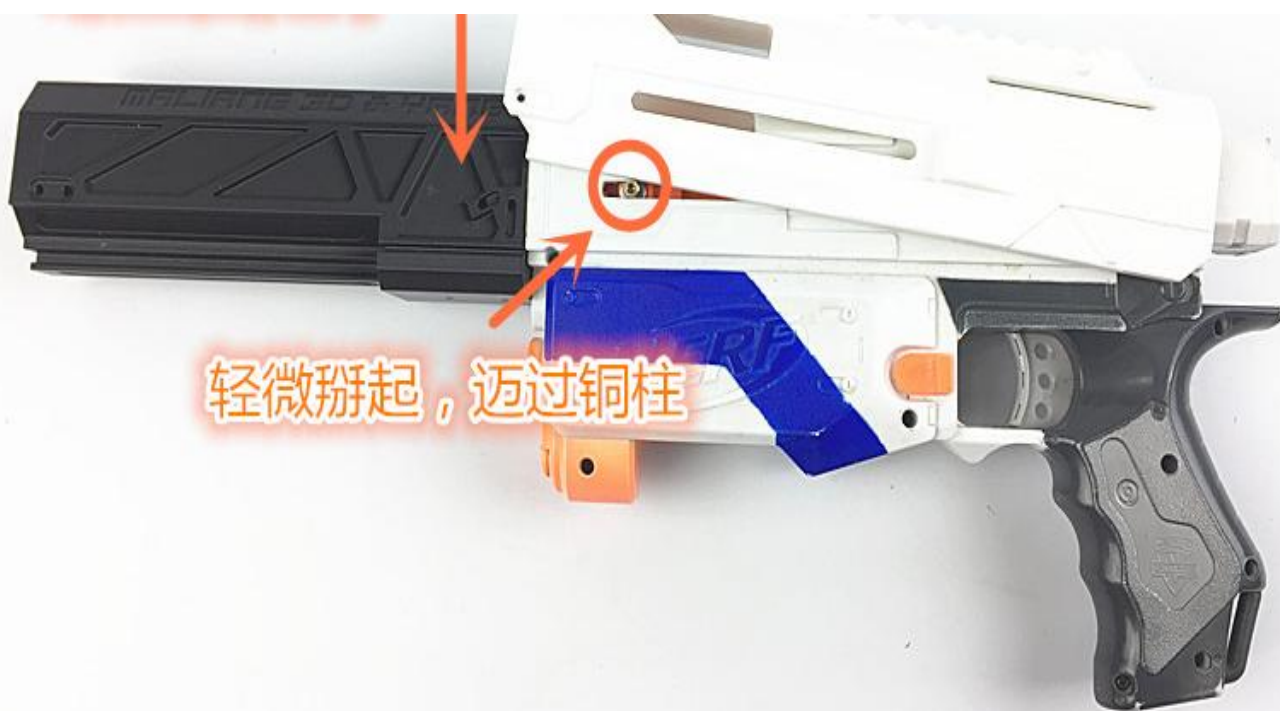


## Step 8:

Fasten the screws to the PWD body secure with the barrel neck.

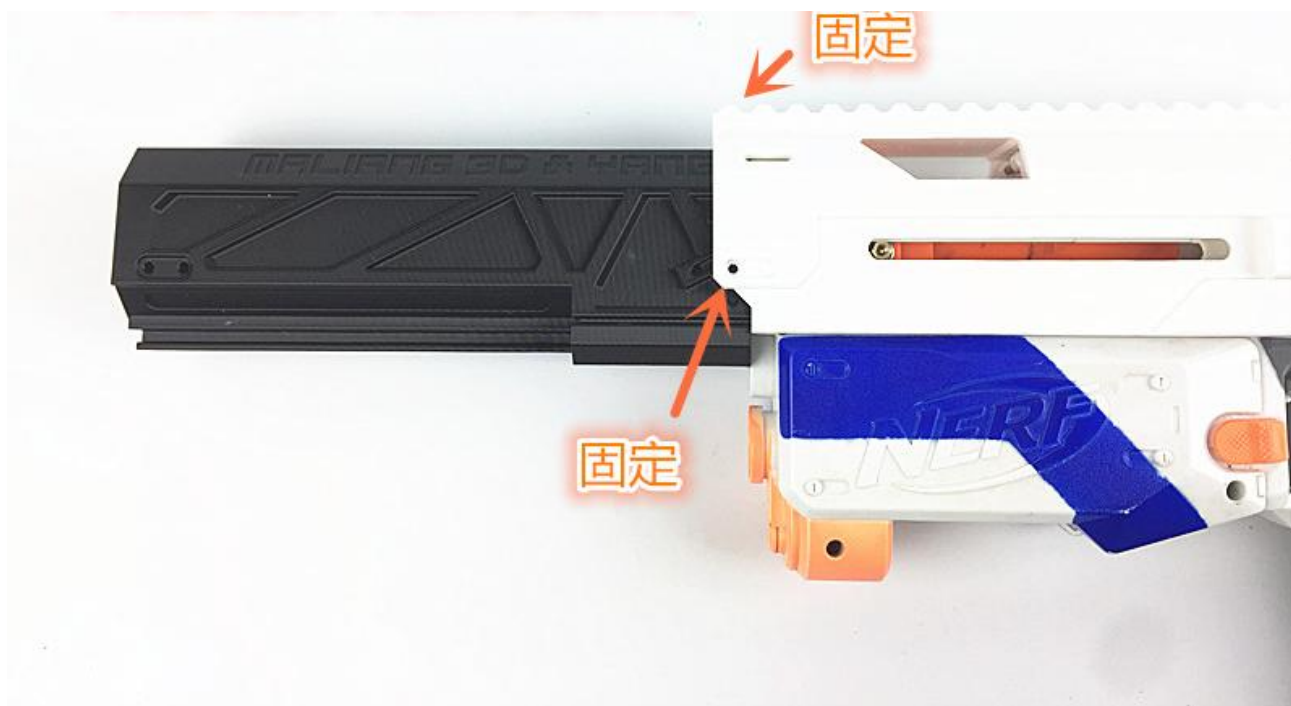

## Step 9:

Insert the barrel cover to the barrel body, slide from the front and meet the PWD body shell. Fasten the screws to secure the shell in place.

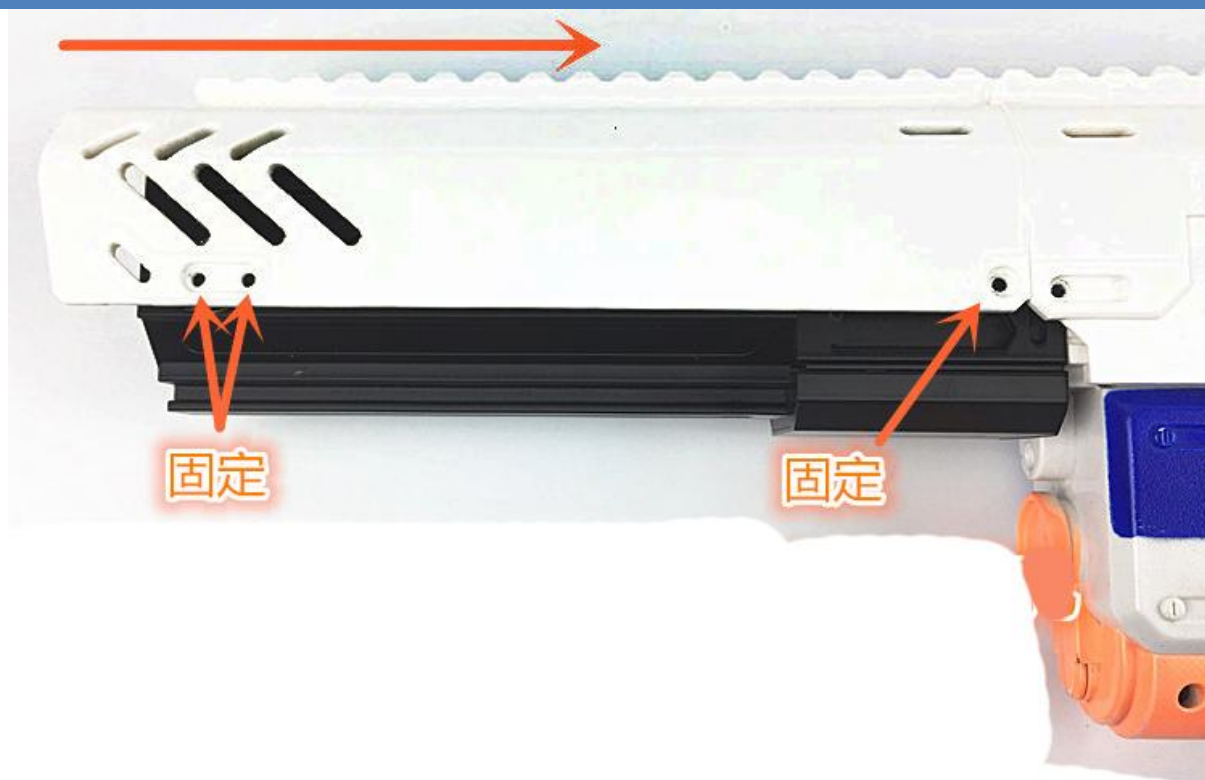




## Step 10:

Install the prime kit to the barrel, make sure the slide rail catch correctly under the barrel bottom rail. Slide from the front and ensure smooth sliding movement. Fasten the screw connecting the prime rod ends to the brass nuts on the retaliator bolt sled.



## Step 11:


Install the muzzle plate parts to the front of barrel body, fasten screw to secure the parts.

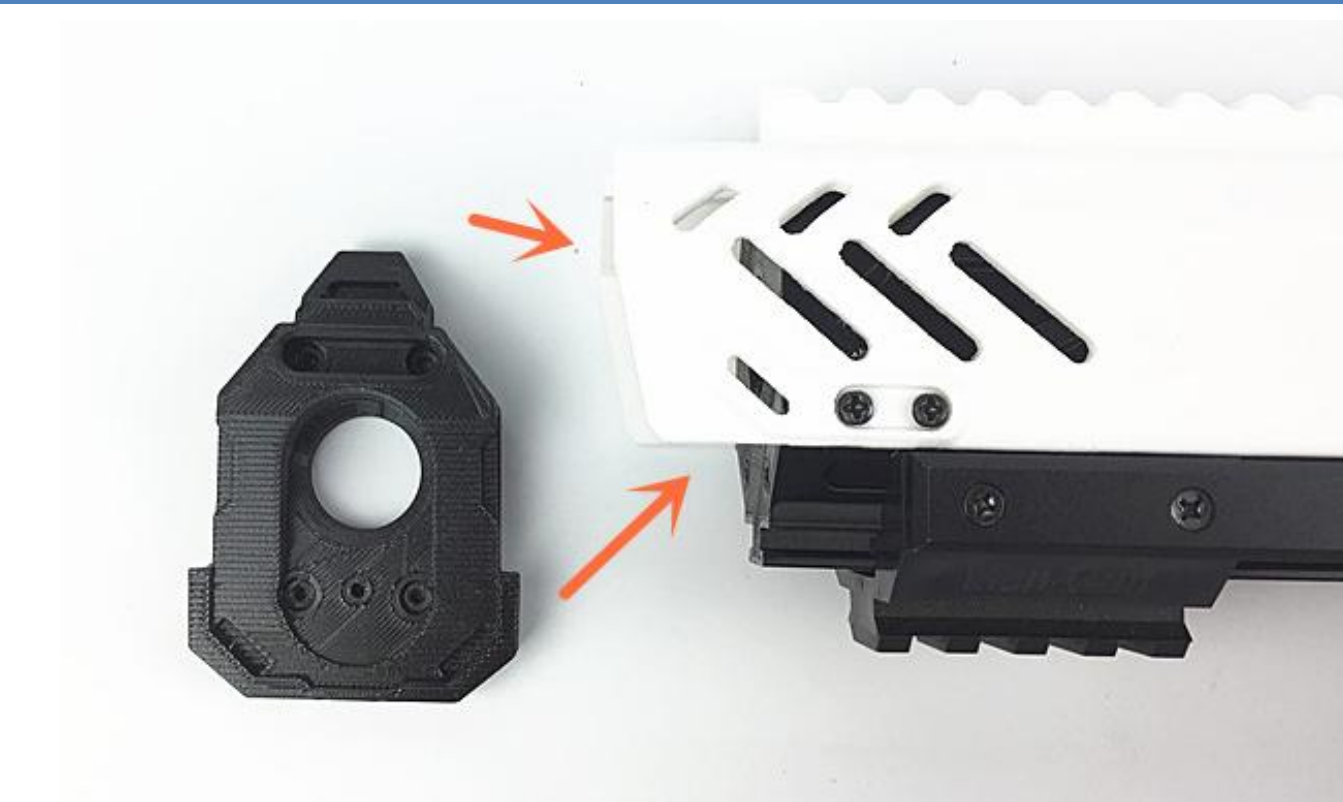



## Step 12:

Install the muzzle parts to the front of barrel body, fasten screw to secure the parts.

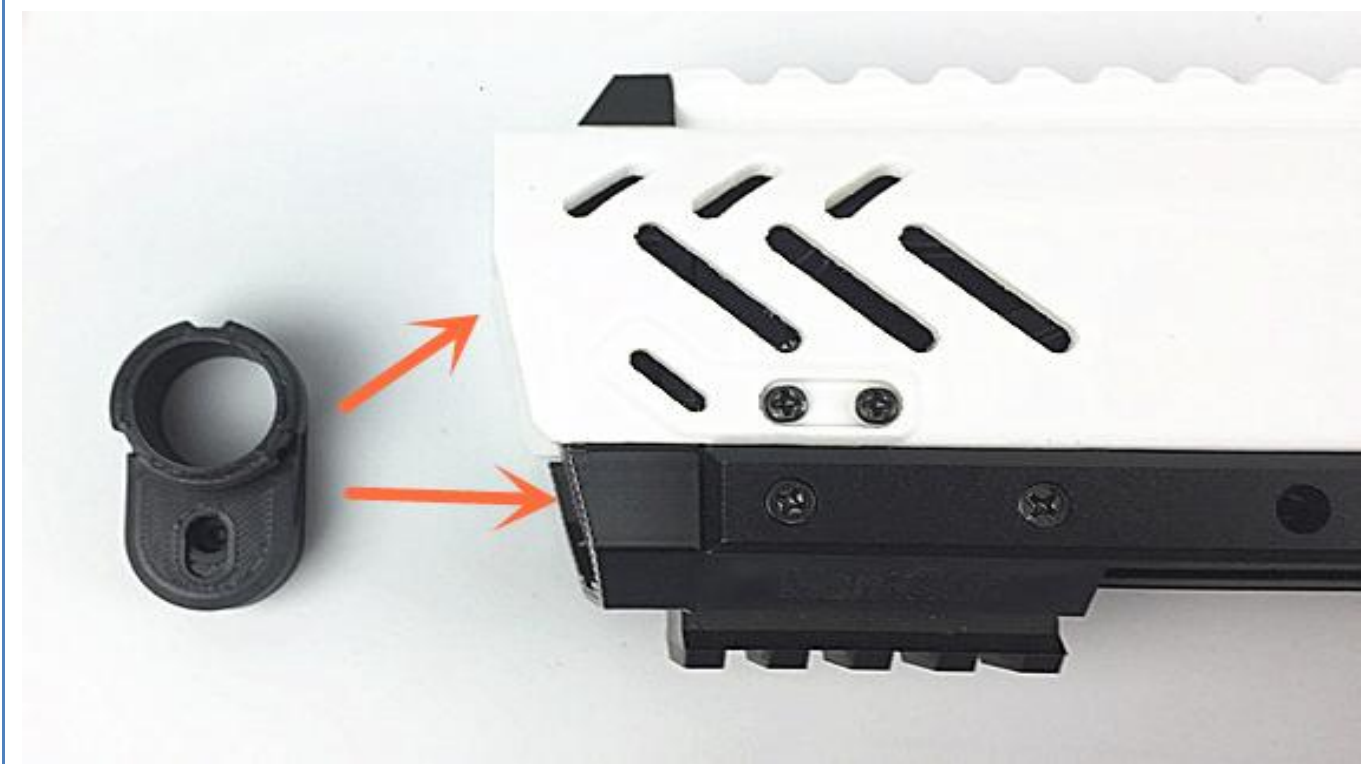

## Step 13:

Insert the barrel tube to the barrel body, slide from the front and push to the end. Fasten the screw under the barrel body to secure the tube in place.



## Step 14:

Install the top rail decoration parts onto the rear end of top rail, fasten screws to secure the parts in place.

