

1) Pick all the screws up and open the blaster shell



2) Remove the buttstock cap and the prime grip.

3) Pick up the prime grip and boltsled module.




4) Replace the metal bolt and install onto the stock boltsled.

5) Install the barrel adaptor, metal barrel tube and plastic barrel tube as shown image.



6) Shell cutting on the Right half shell as shown image, cut away the ridge to allow enough room for the barrel adaptor.

7) Shell cutting on the Left halve shell as shown image, cut away the ridge to allow enough room for the barrel adaptor.

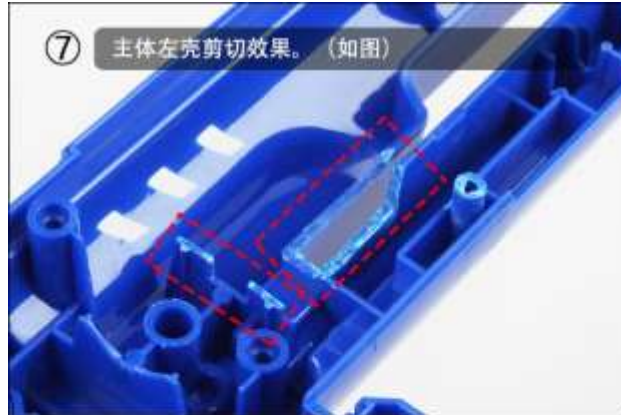

8) Install all the module back to the blaster shell.



11) Install the buttstock cap and fasten the screws to secure it well.



⑧ 替换释放件弹簧。



8) Replace the spring coil on the catch plate with given stronger spring coil.

⑩ 替换套装中的弹簧，用拇指压入主体尾端。



10) Replace the spring coil on the plunger with given stronger spring coil. Push the spring into the chamber before closing the shell.

⑫ 拧好主体螺丝。(红框中螺丝拧不紧，但是可以卡住接头，请务必放入螺丝) 安装完成。



12) Fasten all the screws back to the shell.