

1) Remove all the screw on the buttstock, pull the buttstock out of the blaster body.

① 先把尾托的螺丝拧下来之后把尾托去掉




② 把主体壳面的螺丝拧下来，去掉主体壳面




2) Remove all the screws on the blaster, open the shell and keep all the screw well.

3) Locate the plunger module, remove the spring stopper and replace the spring coil with the 5KG spring in the package.

③ 取下弹簧盖子，替换成套件里的升级弹簧

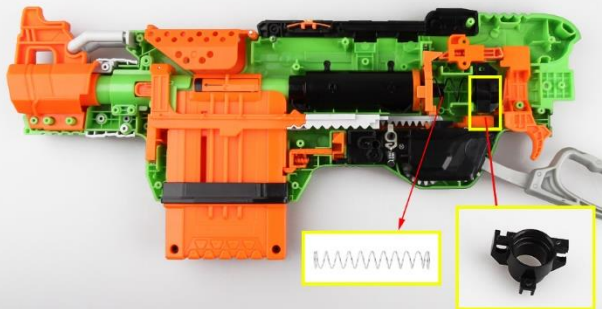

④ 把原来的塑胶件替换成五金件

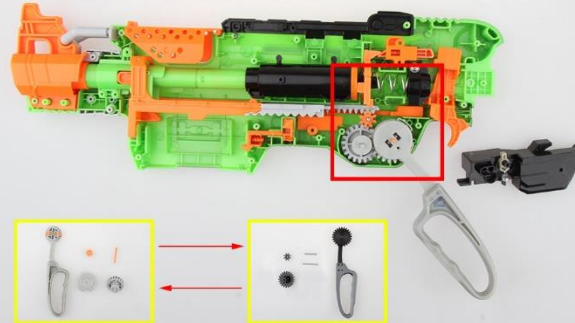

4) Locate the grip level module, replace the stock plastic level system with the metal gear and grip.

5) Install all the metal parts to the shell, check well the level grip install properly.

⑤ 把替换的五金件安装上去，确保手柄安装位置如下图所示。



⑥ 由于替换了升级弹簧，为避免司柱受到损坏，需替换套件里的加长铁柱，并在塑料壳上打孔让铁柱延伸到塑料壳外（借助胶片的力度固定，减小损害）



6) Due to stronger spring load, the metal rod in the level grip have been upgraded as well. A hole on the black plastic gear shell need to be drill at the metal rod location as a fixing support.