



# SHOTGUN DUAL BARREL



AK-BLASTER MOD SHOP IS AN ONLINE SHOP AND WE MAKE PRODUCTS TO MODIFY AND CUSTOMIZE NERF BLASTER.

WE OFFER WORKER MOD, F10555, MEN-GUN MOD, AK TACTICAL GEAR.XSW.ML3D, ARTIFACT, ETC BRAND PRODUCTS ON BLASTER MODDING. WE PROVIDE SERVICES ON CUSTOMIZE BLASTER WITH PARTS, 3D PRINTING AND PAINT WORKS.

WE ORGANIZE BLASTER GAME ACTIVITIES AND NERF PARTY FOR KIDS. WE OFFER VENUE DESIGN, CUSTOMIZE INVITATION CARDS,
HEALTHY FOODS AND CAKE, ORGANIZE NERF BATTLE GAME AND PHOTOGRAPHY SERVICES.

## Disclaimer

#### **Disclaimer:**

Individual results may vary. Modding blasters is a hobby of ours, and in no way do we claim to be experts on the subject. We've written this manual for other enthusiasts who want to accomplish what we have with our blasters. However, due to legal reasons, we're unable to guarantee any results and the content in this manual should not be considered professional advice.

The use of this information and recommended products should be based on your own due diligence. You agree not to hold the authors and/or distributors of this manual liable for any success or failure of your endeavors that are directly or indirectly related to the purchase and use of our information, recommended products and services.



Make sure you have good knowledge on electric circuit and modding skill. Please read below instruction carefully and reference to online video on installing instruction.

## INSTALLATION STEPS

#### **Supplies Needed:**

- Small Phillips Head Screwdriver
- Small Flat Head Screwdriver
- Instant Glue

Precaution: Before installing this dual barrel, the air resistor (AR) built inside the blaster need to be removed or disable, to ensure proper air flow along the chamber and barrel.

AR removal: Advance modding skill required, cut and trim the AR pieces and remove from the chamber front. This is a non-reversible mod to the blaster.

Reversible Mod: Push the AR piece inside to the chamber making it as air flow state (open), apply thin layer of instant glue make it as permanent open state.

#### AR removal diagram




## AR Glue and Stick diagram




**Step 1:**Remove the screws on the blaster shell as shown



**Step 2:**Apply Instant glue in the O-Ring and stick onto the rear mouth of barrel jacket, this is to ensure air seal inbetween the chamber and barrel.

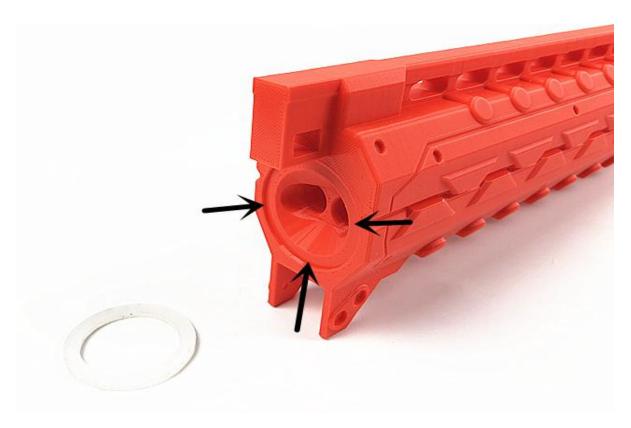

**Step 3:** Check if O-Ring stick onto the barrel.

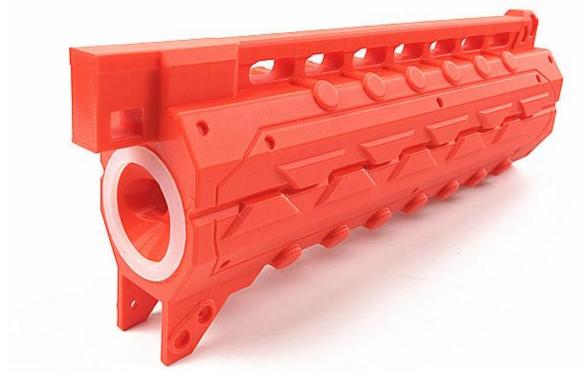

### Step 4:

Install the turning piece onto the barrel, match the screw position and ensure in correct position as shown.



#### Step 5:

Install the turning piece into the blaster, connect the turning piece to the prime rod of the blaster. Screw the hex screw into the turning piece to secure together with the prime rod.



**Step 6:**Install the shell back to the blaster and secure all the screws well.

