



INSTALLATION INSTRUCTIONS



AK-BLASTER MOD SHOP IS AN ONLINE SHOP AND WE MAKE PRODUCTS TO MODIFY AND CUSTOMIZE NERF BLASTER. WE OFFER WORKER MOD, F10555, MEN-GUN MOD, AK TACTICAL GEAR.XSW.ML3D, ARTIFACT, ETC BRAND PRODUCTS ON BLASTER MODDING. WE PROVIDE SERVICES ON CUSTOMIZE BLASTER WITH PARTS, 3D PRINTING AND PAINT WORKS.

WE ORGANIZE BLASTER GAME ACTIVITIES AND NERF PARTY FOR KIDS. WE OFFER VENUE DESIGN, CUSTOMIZE INVITATION CARDS,
HEALTHY FOODS AND CAKE, ORGANIZE NERF BATTLE GAME AND PHOTOGRAPHY SERVICES.

Disclaimer

Disclaimer:

Individual results may vary. Modding blasters is a hobby of ours, and in no way do we claim to be experts on the subject. We've written this manual for other enthusiasts who want to accomplish what we have with our blasters. However, due to legal reasons, we're unable to guarantee any results and the content in this manual should not be considered professional advice.

The use of this information and recommended products should be based on your own due diligence. You agree not to hold the authors and/or distributors of this manual liable for any success or failure of your endeavors that are directly or indirectly related to the purchase and use of our information, recommended products and services.




Make sure you have good knowledge on electric circuit and modding skill. Please read below instruction carefully and reference to online video on installing instruction.

INSTALLATION STEPS

Supplies Needed:

- Small Phillips Head Screwdriver
- Small Flat Head Screwdriver

Step 1: Remove all the screws on the blaster body.

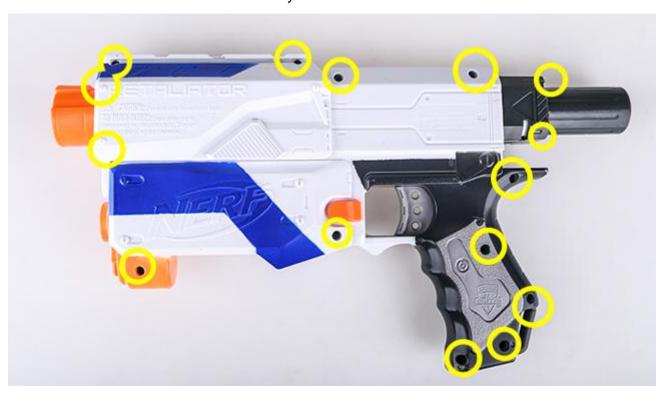

Step 2:Remove the buttstock cap and notice the screws differ to body screws.




Step 3:Open the halves and take photos to remind the parts location.



Step 4:

Remove the screws and put the piston module (as shown) out of the body.

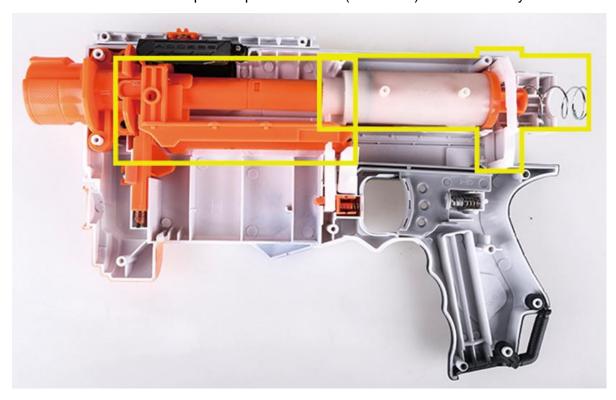

Step 5:Replace the rear plate spring coil with Worker MOD spring coil.



Step 6:Insert the rubber ring into the piston tube, notice the up curve side expose toward centre.



Step 7:

Replace the spring coil with Worker MOD spring coil, lubricate the piston tube internal wall.




Step 8:Replace the O-ring with Worker MOD O-ring.



Step 9:Trim and polish the plastic part as show location, to ensure proper install the buffer piece.



Step10:Install the buffer piece into the gap as shown location, take this procedure on both halves.

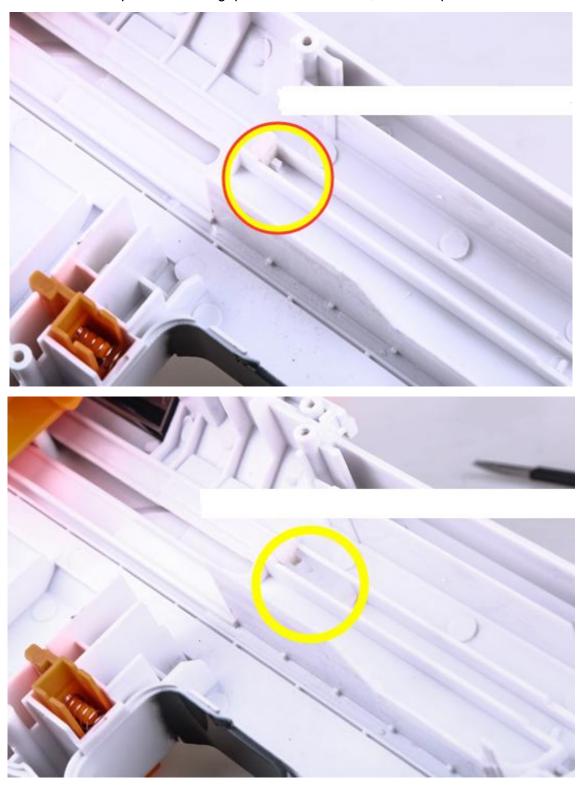

Step 11:Lubricate the O-ring and piston tube wall before assemble the module.



Step 12:Reverse action install the module back to the blaster body and fasten all the screws.

