

www.facebook.com/AKBlasterMOD
Online Store: www.ak-blastermod.com
email: akblastermod@gmail.com
Address: Room 1203, 29 Wing Hong Street, Hong Kong
WWW.AK-BLASTERMOD.COM

WORKER MOD

BOLT & STRIKER SET FOR NERF RETALIATOR BLASTER















AK-BLASTER MOD SHOP IS AN ONLINE SHOP AND WE MAKE PRODUCTS TO MODIFY AND CUSTOMIZE NERF BLASTER. WE OFFER WORKER MOD, F10555, MEN-GUN MOD, AK TACTICAL GEAR.XSW.ML3D, ARTIFACT, ETC BRAND PRODUCTS ON BLASTER MODDING. WE PROVIDE SERVICES ON CUSTOMIZE BLASTER WITH PARTS, 3D PRINTING AND PAINT WORKS.

WE ORGANIZE BLASTER GAME ACTIVITIES AND NERF PARTY FOR KIDS. WE OFFER VENUE DESIGN, CUSTOMIZE INVITATION CARDS, HEALTHY FOODS AND CAKE, DRGANIZE NERF BATTLE GAME AND PHOTOGRAPHY SERVICES.

Disclaimer

Disclaimer:

Individual results may vary. Modding blasters is a hobby of ours, and in no way do we claim to be experts on the subject. We've written this manual for other enthusiasts who want to accomplish what we have with our blasters. However, due to legal reasons, we're unable to guarantee any results and the content in this manual should not be considered professional advice.

The use of this information and recommended products should be based on your own due diligence. You agree not to hold the authors and/or distributors of this manual liable for any success or failure of your endeavors that are directly or indirectly related to the purchase and use of our information, recommended products and services.



Make sure you have good knowledge on electric circuit and modding skill. Please read below instruction carefully and reference to online video on installing instruction.


INSTALLATION STEPS

Supplies Needed:

- Small Phillips Head Screwdriver
- Small Flat Head Screwdriver

Step 1:

Remove all the screws on the blaster, take off the halve and locate the plunger module, pick up for further modding.

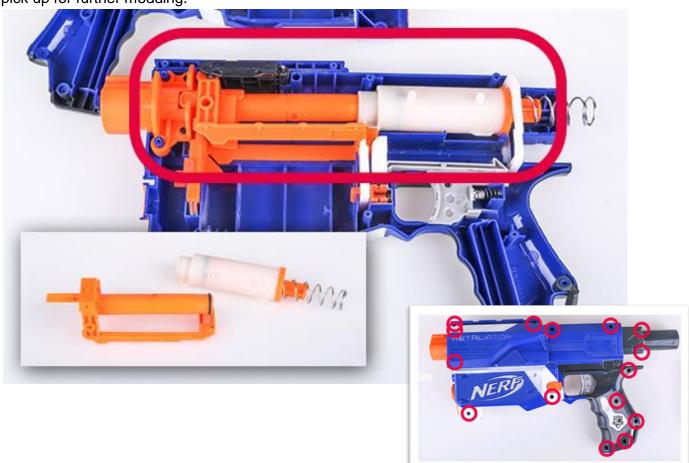

Step 2:

Install the pin screw into the Worker MOD sliding fixture, push the pin screw into the hole with a clip.



Step 3: Install the stock dart container to the slide fixture, secure with the stock metal pin as below image.



Step 4:


Mod the plunger module, remove the stock striker away and apply the lubricate on the plunger housing inside wall.



Step 5:


Install the Worker MOD striker, first put the white O-ring onto the end of striker, apply lubricant and push into the stock plunger housing, beware the installation technique as shown image, push with angle and do not damage the housing.



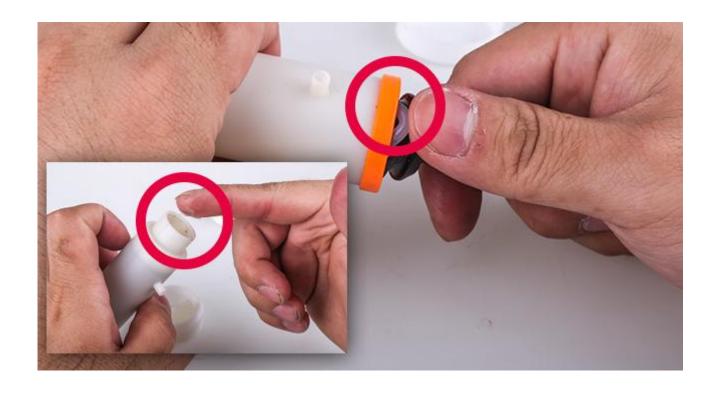

Step 6:

Install all the module back to the blaster, beware all the spring coil in original position, lock and release fixture work well before closing the blaster halves.

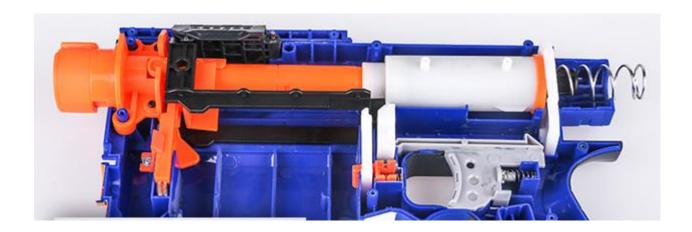

Step 7:

Install the slide fixture back to the blaster body, fasten the bolt into the pin screw and secure well.



