

ATLAS MP-101



PASSION FOR THE DARTS

Disclaimer

Disclaimer:

Individual results may vary. Modding blasters is a hobby of ours, and in no way do we claim to be experts on the subject. We've written this manual for other enthusiasts who want to accomplish what we have with our blasters. However, due to legal reasons, we're unable to guarantee any results and the content in this manual should not be considered professional advice.

The use of this information and recommended products should be based on your own due diligence. You agree not to hold the authors and/or distributors of this manual liable for any success or failure of your endeavors that are directly or indirectly related to the purchase and use of our information, recommended products and services.



Make sure you have good knowledge on electric circuit and modding skill. Please read below instruction carefully and reference to online video on installing instruction.


INSTALLATION STEPS

Supplies Needed:

- Small Phillips Head Screwdriver
- Small Flat Head Screwdriver


Step 1:

Remove all the screw on the blaster and beware keeping the screws in safe area.

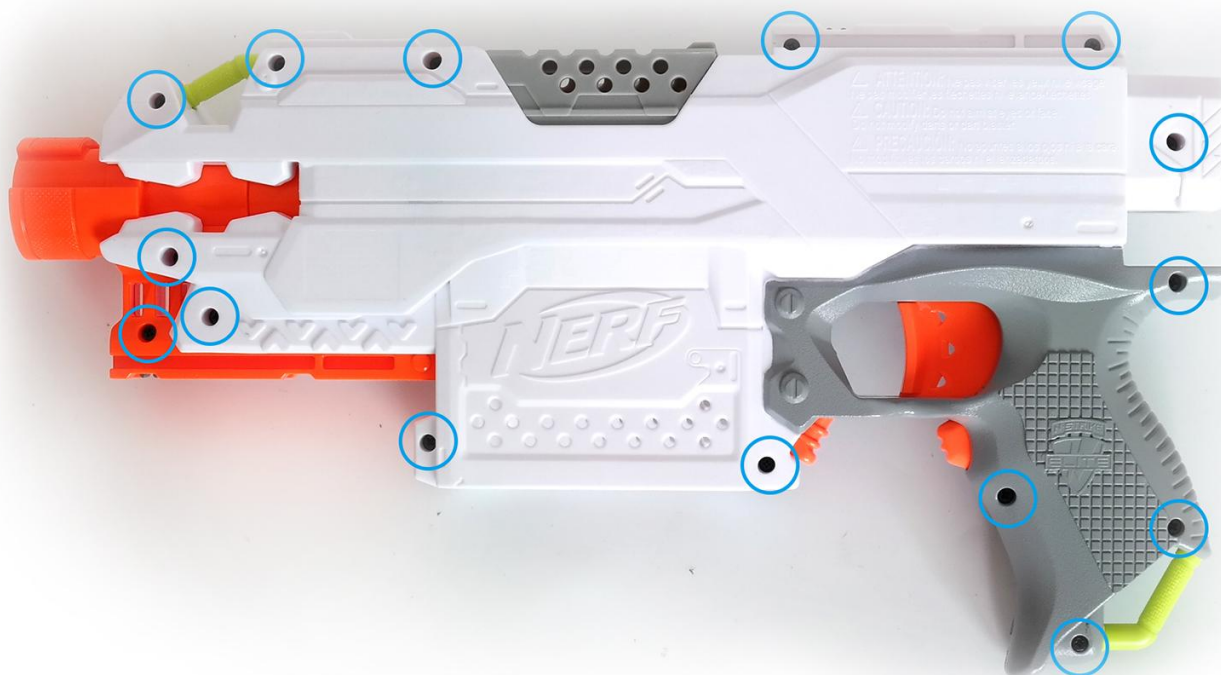


Step 2:

Remove the muzzle and top front bridge parts, keep it safe for reverse modding.

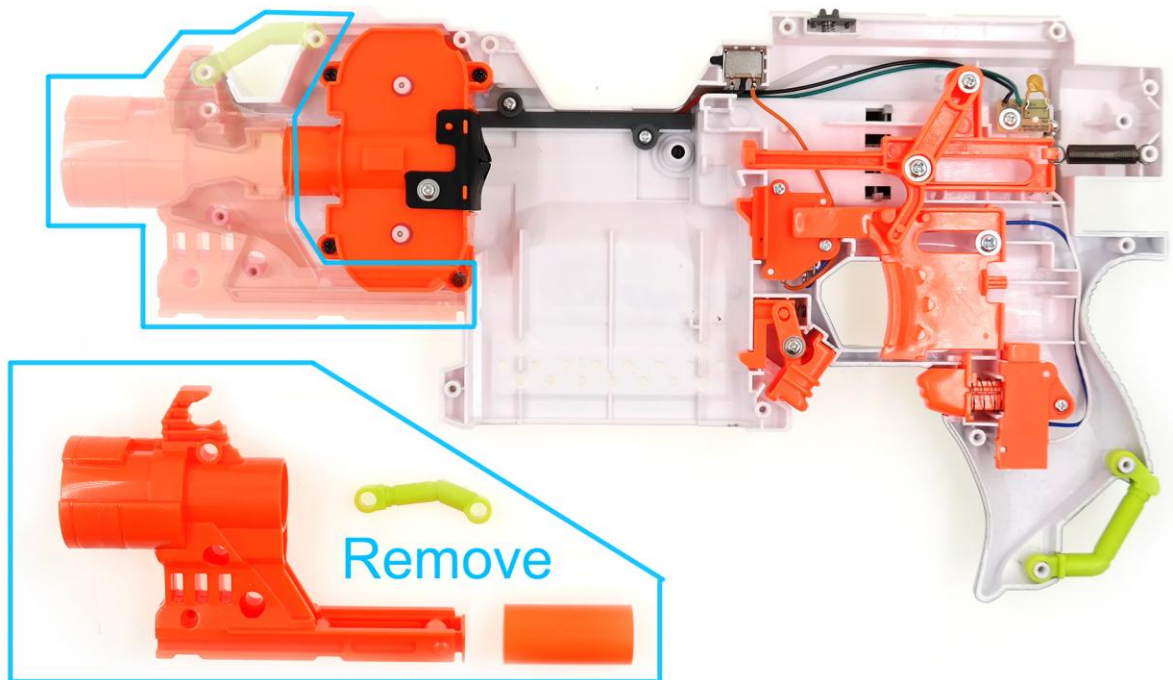

Step 3:

Remove the stock muzzle and replace with the 3D print barrel jacket.

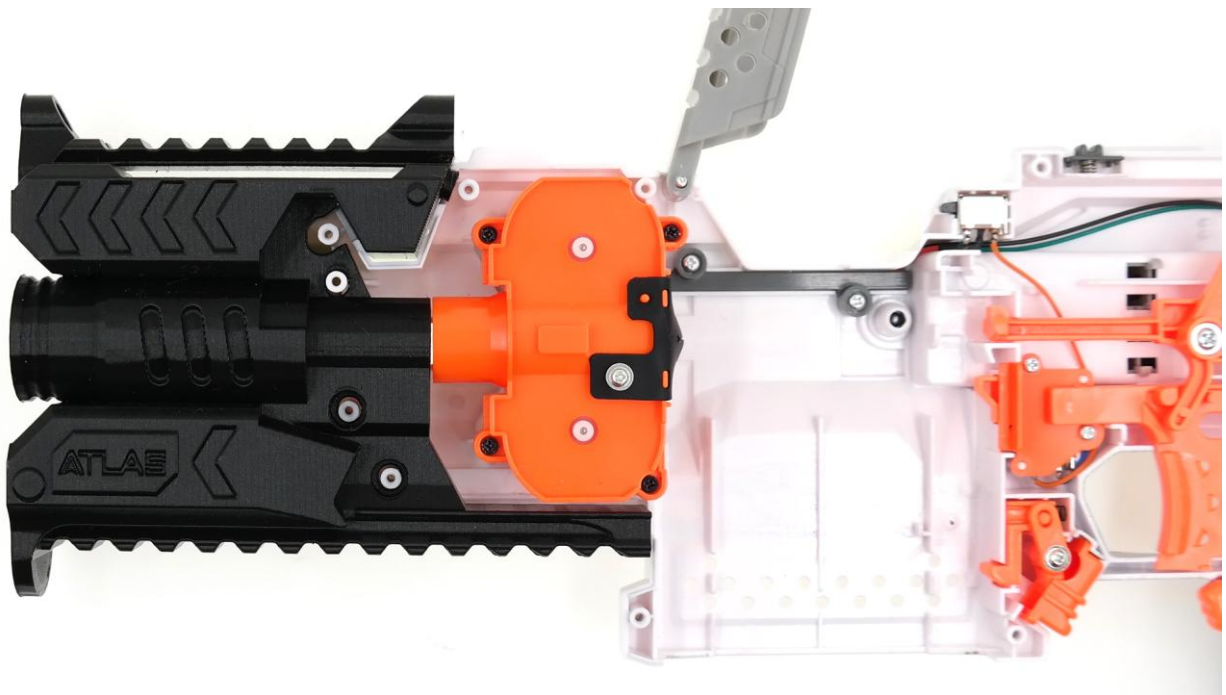

Step 4:

Cover the blaster shell back and fasten all the screws.



Step 5:

Install the top rail onto the jam door, secure the parts with the screw on both sides.

