

AWP



PASSION FOR THE DARTS



WORKER

F10555



**AK
HOMME**

X.S.W

ML3D

AK-BLASTER MOD SHOP IS AN ONLINE SHOP AND WE MAKE PRODUCTS TO MODIFY AND CUSTOMIZE NERF BLASTER. WE OFFER WORKER MOD, F10555, MEN-GUN MOD, AK TACTICAL GEAR.XSW.ML3D, ARTIFACT, ETC BRAND PRODUCTS ON BLASTER MODDING. WE PROVIDE SERVICES ON CUSTOMIZE BLASTER WITH PARTS, 3D PRINTING AND PAINT WORKS. WE ORGANIZE BLASTER GAME ACTIVITIES AND NERF PARTY FOR KIDS. WE OFFER VENUE DESIGN, CUSTOMIZE INVITATION CARDS, HEALTHY FOODS AND CAKE, ORGANIZE NERF BATTLE GAME AND PHOTOGRAPHY SERVICES.

Disclaimer

Disclaimer:

Individual results may vary. Modding blasters is a hobby of ours, and in no way do we claim to be experts on the subject. We've written this manual for other enthusiasts who want to accomplish what we have with our blasters. However, due to legal reasons, we're unable to guarantee any results and the content in this manual should not be considered professional advice.

The use of this information and recommended products should be based on your own due diligence. You agree not to hold the authors and/or distributors of this manual liable for any success or failure of your endeavors that are directly or indirectly related to the purchase and use of our information, recommended products and services.



Make sure you have good knowledge on electric circuit and modding skill. Please read below instruction carefully and reference to online video on installing instruction.

INSTALLATION STEPS

Supplies Needed:

- Small Phillips Head Screwdriver
- Small Flat Head Screwdriver


Step 1: Insert the front barrel to the barrel body as shown.



Step 2: Install the 5cm rail to the barrel at the bottom.



Step 3: Install the barrel to the blaster body connecting the muzzle adaptor.

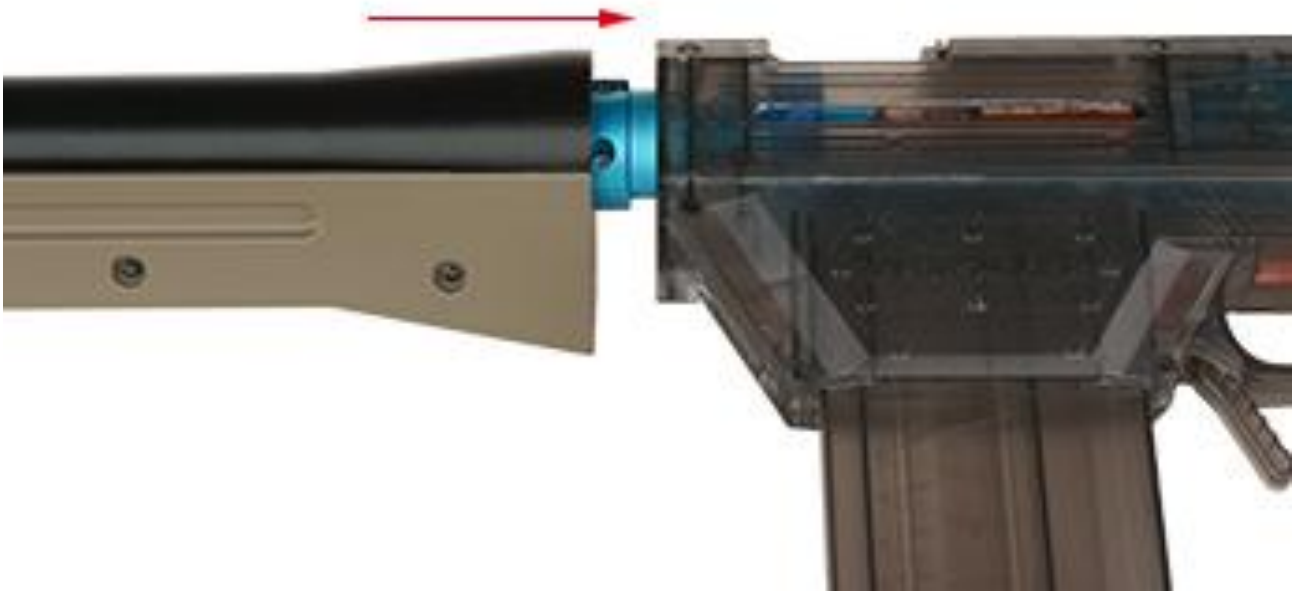

Step 4: Fasten the KA3*10 screw to secure the barrel.




Step 5: Install the buttstock to the body.



Step 6: Remove the screw on the prime rod as shown.



Step 7: Install the prime rod to the body. Match the screw to the boltshed and fasten the screws to connect the prime rod to the boltshed.

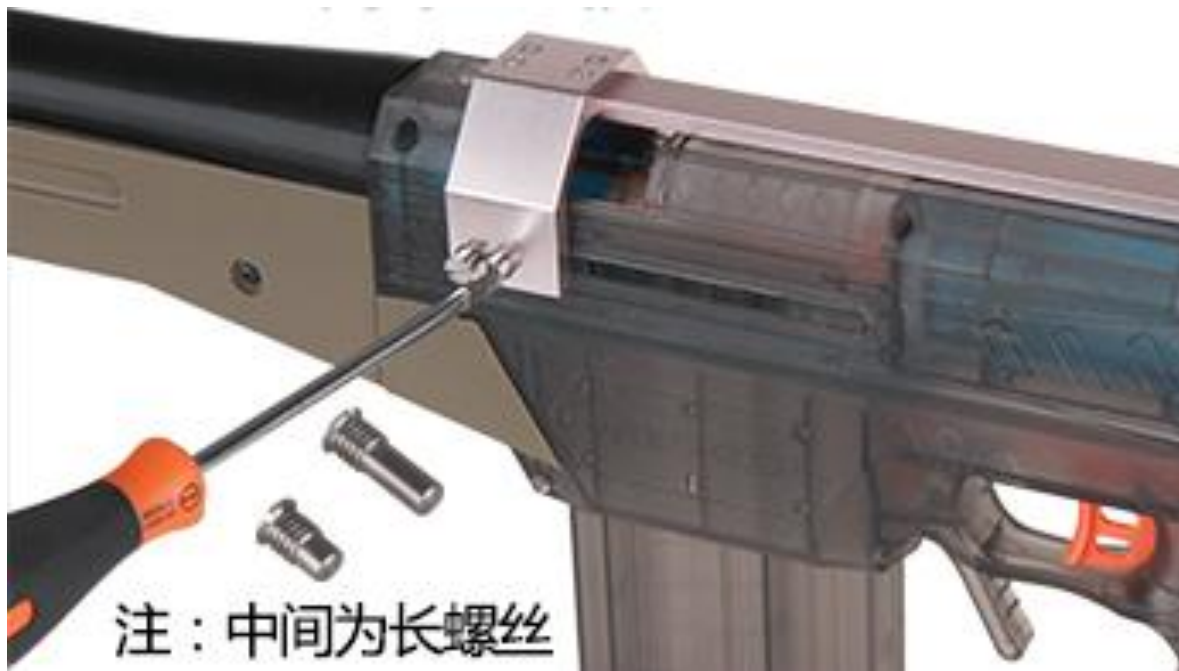

注意：中间是长螺丝

Step 9: Install the top rail to the blaster body and buttstock



Step 10: Install the scope onto the rail and fasten to secure in place.

步骤九：安装装饰瞄

注：用M2.5六角匙安
装（需另购）

