


① Turn on blaster shell and gear cover.




② Take out bolt sled group.

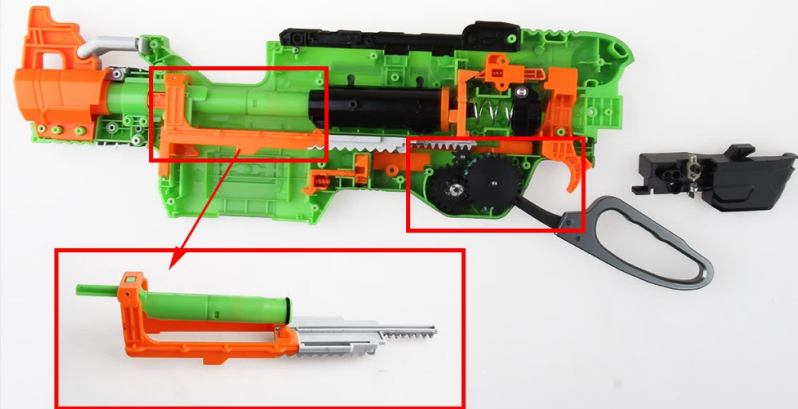

③ Replace the catcher of bolt sled with metal catcher in kit.




④ Cut rods on original position of connector.

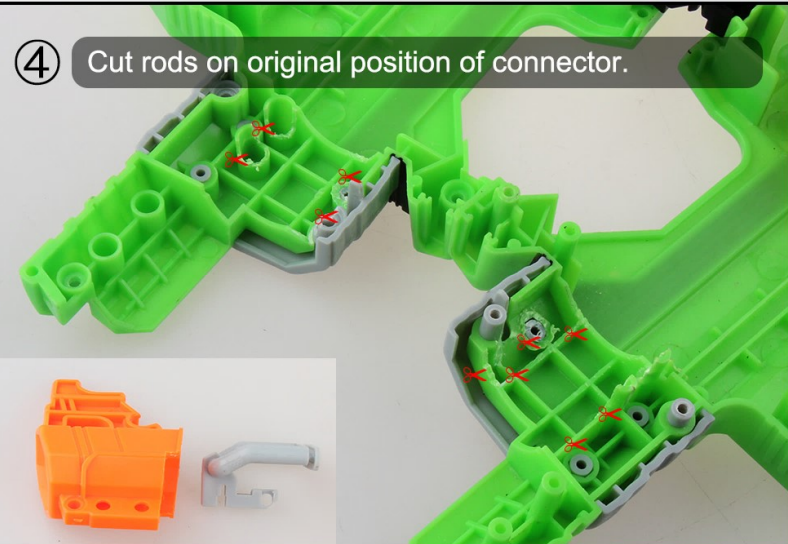


⑤ Cutting situation of the right shell.




⑥ Cutting situation of the left shell.

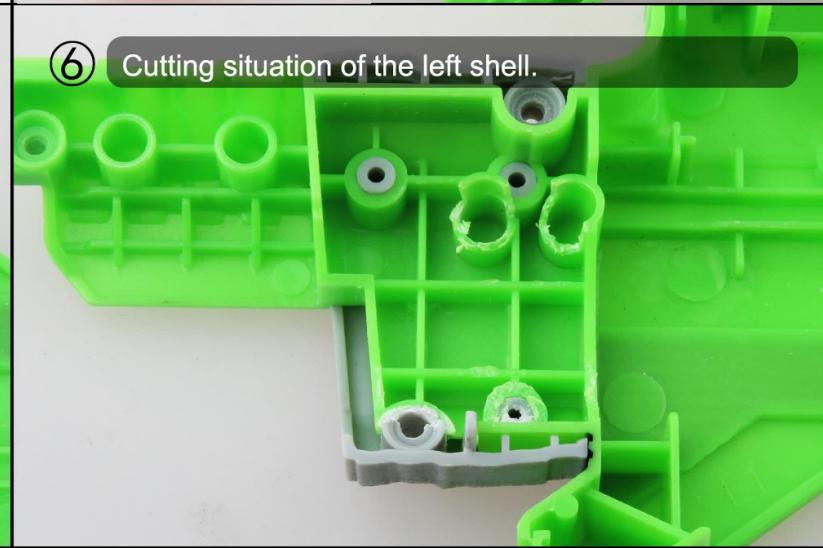


⑦ Insert front barrel of short dart reform into connector.

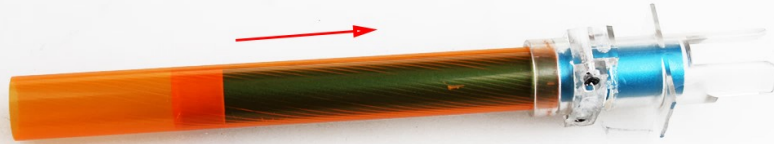

⑧ Put the bolt sled group and connector group in blaster

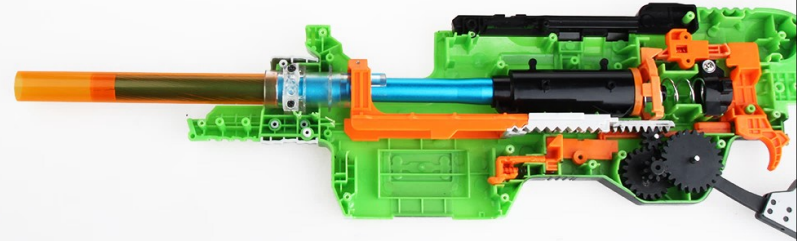


⑨ Cutting position of shooting mouth.(as picture shows)

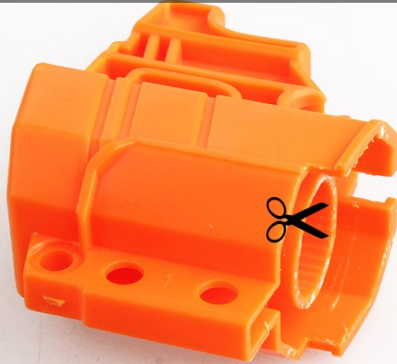

⑩ Assemble accessories in blaster.



⑪ Installation method of the printed front barrel
(Replace original front barrel)

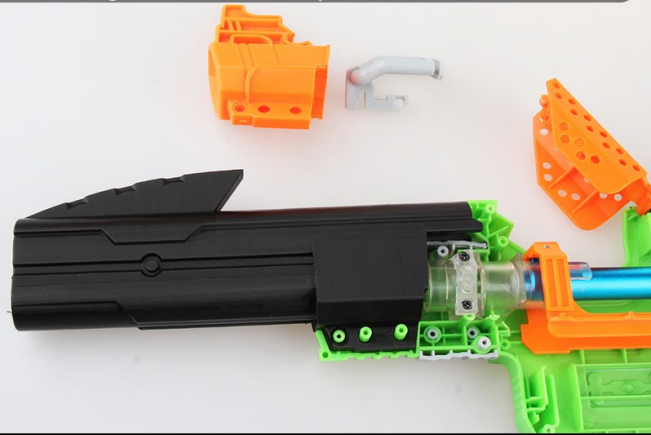

⑫ Close blaster shell,twist screws well,finish installation

