



www.facebook.com/AKBlasterMOD
Online Store: www.ak-blastermod.com
email: akblastermod@gmail.com
Address: Room 1203, 29 Wing Hong Street, Hong Kong
WWW.AK-BLASTERMOD.COM

PUMP KIT BUTTSTOCK FOR APOLLO XV700 BLASTER



PASSION FOR THE DARTS



WORKER

F10555



AK
HOMME

X.S.W ML3D

AK-BLASTER MOD SHOP IS AN ONLINE SHOP AND WE MAKE PRODUCTS TO MODIFY AND CUSTOMIZE NERF BLASTER. WE OFFER WORKER MOD, F10555, MEN-GUN MOD, AK TACTICAL GEAR, X.S.W. ML3D, ARTIFACT, ETC BRAND PRODUCTS ON BLASTER MODDING. WE PROVIDE SERVICES ON CUSTOMIZE BLASTER WITH PARTS, 3D PRINTING AND PAINT WORKS. WE ORGANIZE BLASTER GAME ACTIVITIES AND NERF PARTY FOR KIDS. WE OFFER VENUE DESIGN, CUSTOMIZE INVITATION CARDS, HEALTHY FOODS AND CAKE, ORGANIZE NERF BATTLE GAME AND PHOTOGRAPHY SERVICES.

Disclaimer

Disclaimer:

Individual results may vary. Modding blasters is a hobby of ours, and in no way do we claim to be experts on the subject. We've written this manual for other enthusiasts who want to accomplish what we have with our blasters. However, due to legal reasons, we're unable to guarantee any results and the content in this manual should not be considered professional advice.

The use of this information and recommended products should be based on your own due diligence. You agree not to hold the authors and/or distributors of this manual liable for any success or failure of your endeavors that are directly or indirectly related to the purchase and use of our information, recommended products and services.



Make sure you have good knowledge on electric circuit and modding skill. Please read below instruction carefully and reference to online video on installing instruction.

INSTALLATION STEPS

Supplies Needed:

- Small Phillips Head Screwdriver
- Small Flat Head Screwdriver

Step 1:

Unfasten all the screws on the blaster and notice the muzzle contains 2 long screws.



Step 2:

Take off one halve and remove the muzzle.



Step 3:

Install the 3D Printed Barrel in replace the muzzle, be careful the direction of the barrel.



Step 4:

Cover the halve and fasten all the screws back to the blaster. Install the top fixture onto the rounding loading trigger and fasten the screws.




Step 5:

Install the fixture onto the top of barrel rail, slide backward from the front along the rail, fasten the screws to secure the fixture onto the rail in position.



Step 6:

Fasten the screws inside the fixture from the top, to secure the fixture in position on the rail.

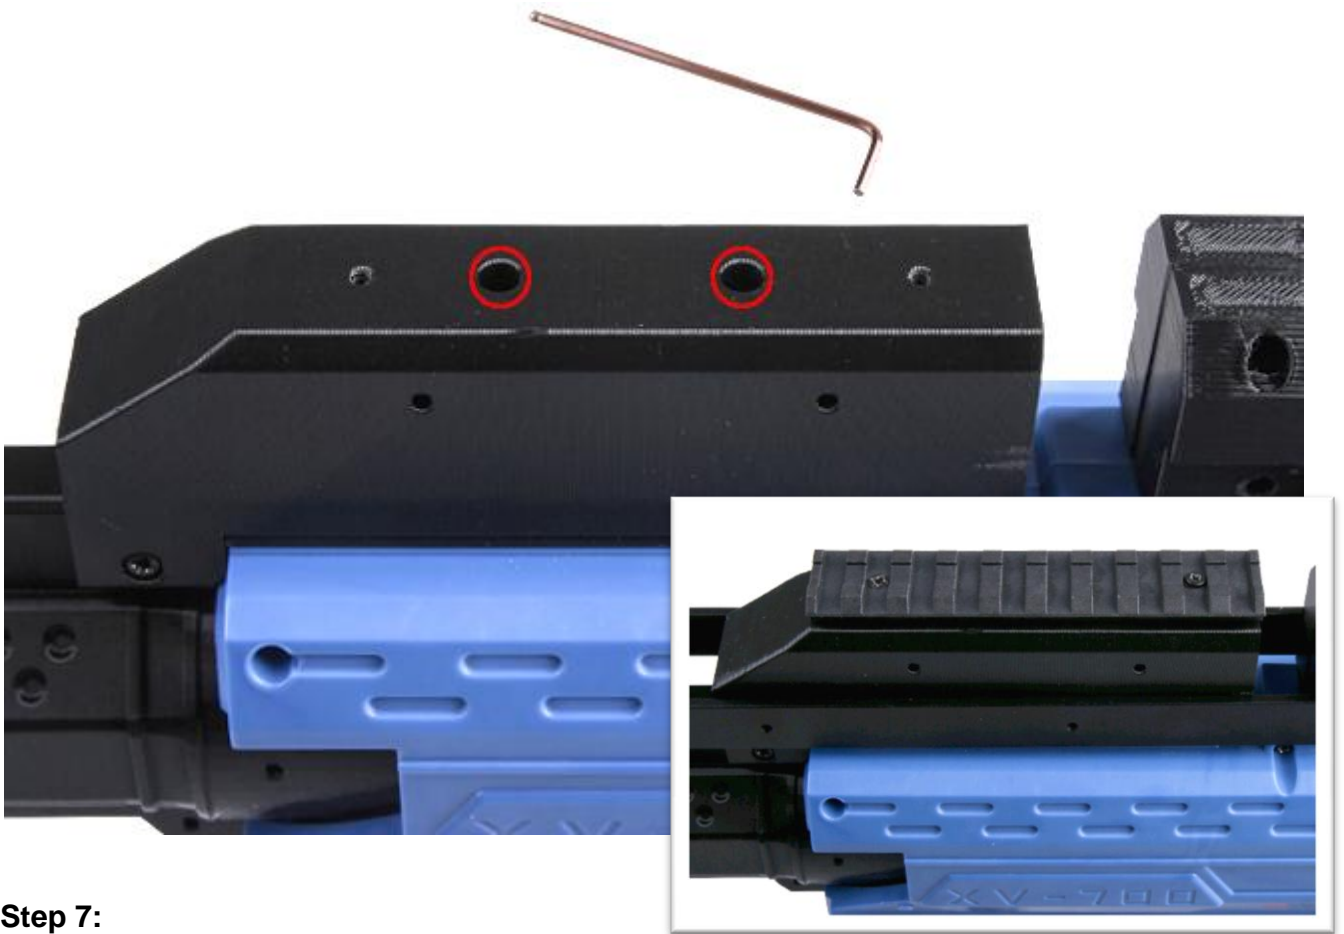

Step 7:

Insert the hand pump parts onto the barrel jacket, notice the direction of the parts and slide into the barrel from the front. Install the metal rods on both sides and secure by screws and nut.



Step 8:

Install the grip into the pump kit. Slide into the pump kit along the rail and secure by fastening the screws.



Step 9:

Install the buttstock by assemble the two halves with fastening the screws provided. Be aware the location of the inside fitting on the blaster.

