

KRISS VECTOR

INSTALLATION INSTRUCTIONS



PASSION FOR THE DARTS



WORKER

F10555

Men-Gun



AK
HOMME

X.S.W

ML3D

AK-BLASTER MOD SHOP IS AN ONLINE SHOP AND WE MAKE PRODUCTS TO MODIFY AND CUSTOMIZE NERF BLASTER. WE OFFER WORKER MOD, F10555, MEN-GUN MOD, AK TACTICAL GEAR, XSW, ML3D, ARTIFACT, ETC BRAND PRODUCTS ON BLASTER MODDING. WE PROVIDE SERVICES ON CUSTOMIZE BLASTER WITH PARTS, 3D PRINTING AND PAINT WORKS. WE ORGANIZE BLASTER GAME ACTIVITIES AND NERF PARTY FOR KIDS. WE OFFER VENUE DESIGN, CUSTOMIZE INVITATION CARDS, HEALTHY FOODS AND CAKE, ORGANIZE NERF BATTLE GAME AND PHOTOGRAPHY SERVICES.

Disclaimer

Disclaimer:

Individual results may vary. Modding blasters is a hobby of ours, and in no way do we claim to be experts on the subject. We've written this manual for other enthusiasts who want to accomplish what we have with our blasters. However, due to legal reasons, we're unable to guarantee any results and the content in this manual should not be considered professional advice.

The use of this information and recommended products should be based on your own due diligence. You agree not to hold the authors and/or distributors of this manual liable for any success or failure of your endeavors that are directly or indirectly related to the purchase and use of our information, recommended products and services.



Make sure you have good knowledge on electric circuit and modding skill. Please read below instruction carefully and reference to online video on installing instruction.

INSTALLATION STEPS

Supplies Needed:

- Small Phillips Head Screwdriver
- Small Flat Head Screwdriver


Step 1:

Remove all the screw on the blaster and beware keeping the screws in safe area.



Step 2:

Remove the muzzle and top front bridge parts, keep it safe for reverse modding.

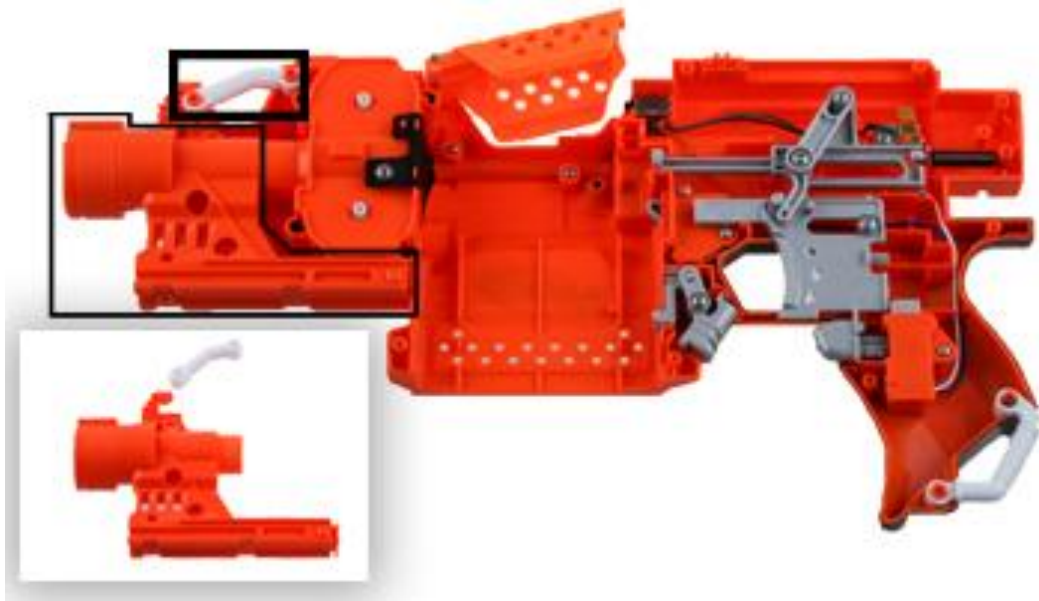

Step 3:

Replace the muzzle with Worker MOD F10555 Stryfe muzzle.



Step 4:

Cover the blaster shell back and fasten all the screws.




Step 5:

Install the grip slide into the JSSAP Barrel Jacket bottom rail



Step 6:

Install the screws as shown orange circles, make use of a long screw driver and fasten the screws with barrel jacket and grip.

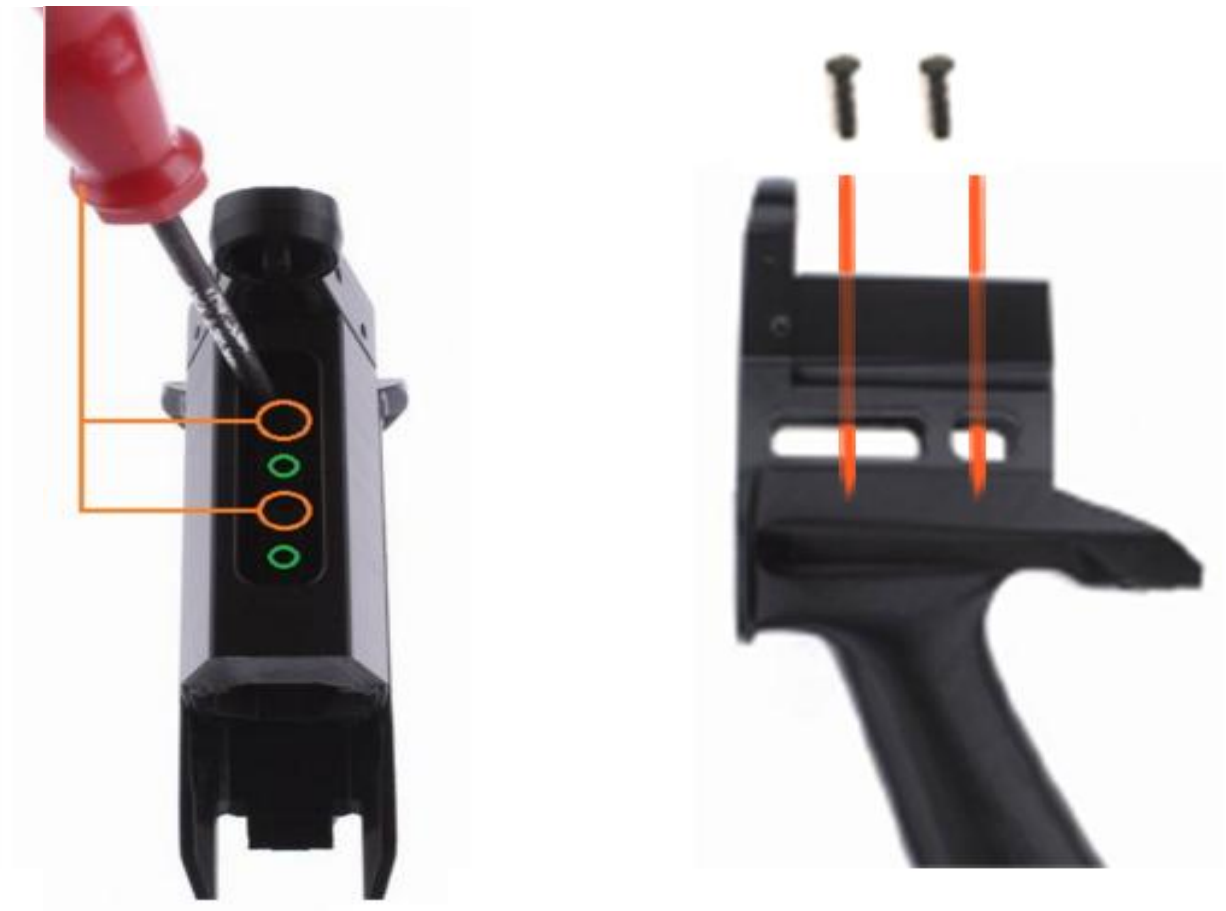**Step 7:**

Slide the barrel jacket into the Stryfe muzzle, ensure slide to the end at proper position.



Step 8:

Install the screws as shown green circles, fasten the screws with barrel jacket and muzzle.



Step 9:

Install the tactical rails onto the barrel jacket as shown indicate with rails length.

